NOKIA
CONNECTING PEOPLE

Quick Start Guide

Thank you for purchasing the Nokia 6235i phone!

N2915

Use this guide to:

- Get familiar with your Nokia 6235i phone
- Use the five-way joystick
- Activate the speakerphone
- Record a video clip
- Send a multimedia message

NOKIA 6235i

All screen images are simulated.

1 Check it out!

1. **Power key**
   Press and hold to turn phone on or off. Press and release to switch between profiles.
2. **Integrated VGA camera with video recording functionality**
   Always have a camera on hand and record special moments as they happen.
3. **Left and right selection keys**
   Press to choose the option shown on the screen above the key.
4. **Five-way joystick**
   In Menu mode, move the joystick up, down, left, and right to navigate the menu system. Press the middle of the joystick to select an item. From the Start screen, pressing the middle of the joystick accesses the menu.
5. **Call key**
   Dials a number. Answers a call. Shows recent calls made.
6. **End key**
   Ends an active call. Rejects an incoming call. Exits from any function.
7. **Chrome accents**
   A unique feature, which adds to the attractive appearance of this classic phone.
8. **Volume key**
   Raise or lower the sound of the speaker's voice.

2 Premium Design.

The Nokia 6235i is a small phone designed to make a big impact. Beautifully designed with chrome accents and stylish looks, this phone boasts usability features such as an icon-based UI and a five-way joystick for easy navigation. The backlit keypad ensures ease of use, even in the dark!

Navigate with the joystick

1. Press the middle of the joystick to select Menu. (⊙)
2. Move the joystick up, down, left, and right to scroll through the menu options (fig. 2.1). (⊙)
3. When the menu item that you want is highlighted, press the center of the joystick to select it. (⊙)
4. In the submenus, press the right selection key to return to the previous menu (fig. 2.2). (—)

Tip: Press the end key to return to the Start screen from any menu or submenu.

Activate the speakerphone

1. To activate the speakerphone during a call, press the right selection key to select Loudsp. (—)
2. To deactivate the speakerphone, press the right selection key to select Normal (fig. 2.3). (—)

Tip: The speakerphone works best when it is on a flat surface, such as a table top.

fig. 2.1

fig. 2.2

fig. 2.3

3 Imaging.

Behind the classic looks of the Nokia 6235i phone you'll find up-to-the-minute imaging features such as a VGA camera and video recorder. Of course, you'll need extra memory to store all of these images so the phone contains 10 MB dynamic memory for your convenience! This memory also holds other items such as pictures, ring tones, and applications.

fig. 3.1

fig. 3.2

fig. 3.3

Record a video clip

1. Press the middle of the joystick to select Menu. (⊙)
2. Move the joystick down and select Camera. (▢) (⊙)
3. Press the left selection key to select Options. (—)
4. Select Change mode (fig. 3.1). (⊙)
5. Scroll to and select Video (fig. 3.2). (▢) (⊙)
6. Select Record. (⊙)
7. Select Stop when finished recording (fig. 3.3). (—)

Note: The recording is stored in the Video clips folder on the Gallery menu.
Note: Copyright protection may prevent some images, ring tones, and other content from being copied, modified, transferred, or forwarded.

4 Multimedia and Personalization.

How would you like to be entertained? The choice is yours ... you can enjoy multimedia such as the radio, Internet, or capturing video. Or you can personalize your phone by downloading ring tones, wallpapers, screen savers, games, and applications. With the Nokia 6235i phone multimedia means multi choice!

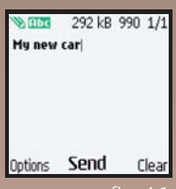

fig. 4.1

fig. 4.2

fig. 4.3

Create and send multimedia messages

1. Press the middle of the joystick to select Menu. (⊙)
2. Select Messages. (⊙)
3. Scroll to and select Multimedia msgs. (▢) (⊙)
4. Select Create message. (⊙)
5. Key in the message text and press the left selection key to select Options (fig. 4.1). (—)
6. Scroll to and select Insert. (▢) (⊙)
7. Scroll to and select Video clip (fig. 4.2). (▢) (⊙)
8. Scroll to and select the desired folder. (▢) (⊙)
9. Scroll to the video clip you want and press the left selection key to select Options. (▢) (—)
10. Select Insert. (⊙)
11. Select Send. (⊙)

To display wallpaper on the start screen

1. Press the middle of the joystick to select Menu. (⊙)
2. Scroll to and select Settings. (▢) (⊙)
3. Scroll to and select Display settings. (▢) (⊙)
4. Select Wallpaper (fig. 4.3). (⊙)
5. Press the middle of the joystick to select On. (⊙)

5 Use it!

This classic, stylish phone is a perfect combination of the professional and personal. Power it up now and start enjoying its practical, entertaining, and performance-enhancing features.

To learn more about other great features and enhancements of your Nokia 6235i phone as well as important safety and operating instructions, please review the Nokia 6235i User Guide or visit www.nokiausa.com/support.

Copyright© 2005 Nokia. All rights reserved. Nokia, Nokia Connecting People, and Nokia 6235i phone are trademarks or registered trademarks of Nokia Corporation. Many features and mobile services are network dependent and require network support. Some networks have limitations that affect how you can use phone features. Contact your service provider about feature support and availability. All screen images are simulated.

NOKIA
CONNECTING PEOPLE